



FABRIC INSTALLATION

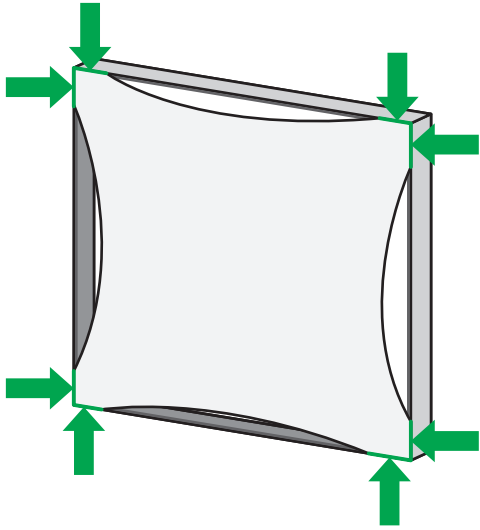


1. CORNERS

Always begin with the corners. Start by inserting the upper left corner of the graphic and then work your way around in a clockwise fashion.

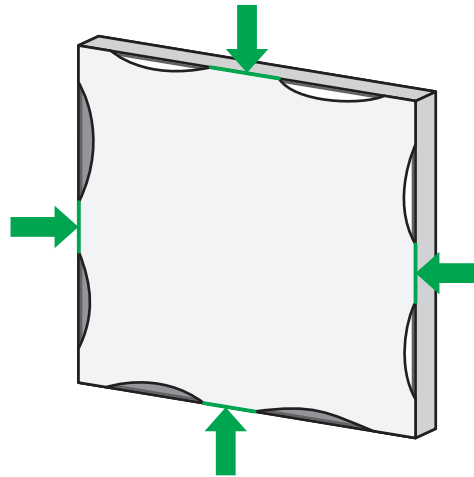

2. CENTERS

With the corners now squarely in place, grab the center of the graphic along the top edge and insert into the channel. Continue to do the same along each edge, always grabbing in the center.

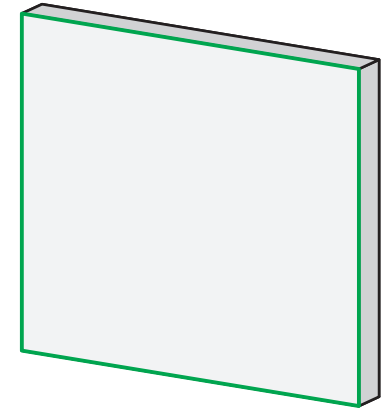


3. FINISH

Complete the installation by inserting all remaining edges into the channel. Begin at the center and work your way out towards the corners on each side. See the **Pro Tips** below for additional tips and tricks.

PRO TIPS

A clear tab has been strategically placed in the bottom, right-hand corner of the graphic to make removing or replacing the graphic a breeze.

Silicone Gasket Install

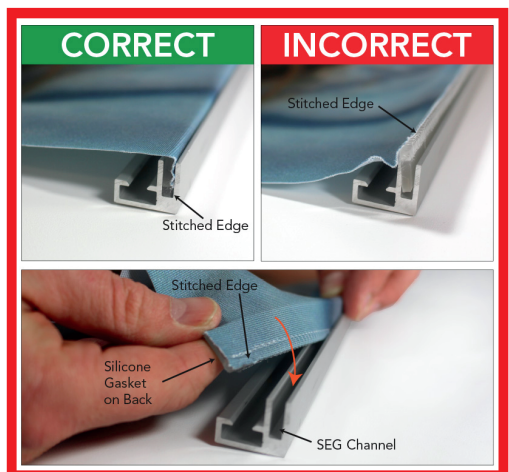

If edges are not properly installed as shown,
Graphic will be loose and wrinkled.

IMPORTANT